

Epic Shot Auto Trap

WARNING

SAFETY, STORAGE & USE

If the main spring is attached and the trap arm is in the 6 o'clock position, the trap is armed and extreme caution is required.

To disarm, turn the switch up to disarm on the trap and depress the foot pedal release. This rotates the arm clockwise until it reaches the 12 o'clock position. When disarmed, remove the main spring before making any adjustments in regards to the trapping position or when storing the trap after use. When storing the unit, turn the switch to the off position and make sure that the spring is removed.

Epic shot outdoors, LLC does not accept any responsibility for damages and/or injury sustained from the use or misuse of this product.

Parts Included:



4-Legs
8-Stacker Poles with
Hex Screws
1-W type dome
1-Black Main Spring
with 2 M12 lock nuts
1-Foot Pedal



1-Main Unit
1-Safety Ring
1-Large Wrench
1-Small Wrench
1 – Hexagon socket
wrench



Insert Legs into each leg bracket and tighten with bolt.

Attach each pole ensuring that the smaller poles are in the front of the trap and larger poles are in the rear. Now attach W type dome to top of poles and tighten hex screws.

Safety Ring Guard shows the projection of the throwing arm when in use to ensure safety

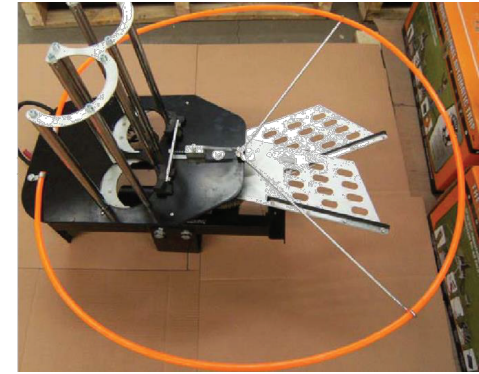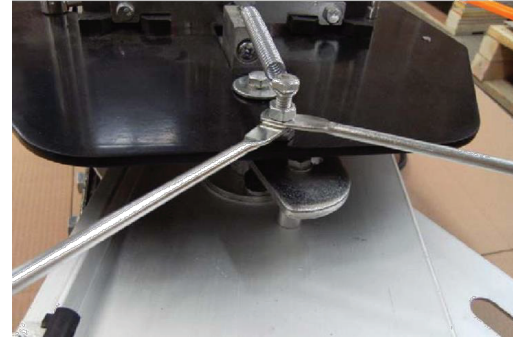

Rotate arm counter clockwise to 12:00. Insert Black Main Spring into silver swiveling spring hook.


Attach Spade Bolt to spring & feed thru opening at back of trap.

Tighten to show 1 or 2 threads on the back side of the lock nut.

Now tighten the inner lock nut loser to the frame.



Because the clay lands directly onto the throwing arm, the **White Wing** needs little adjustment. Loosen the two bolts on either side of the trap to adjust your throwing angle. Once desired angle is reached, tighten bolts back.

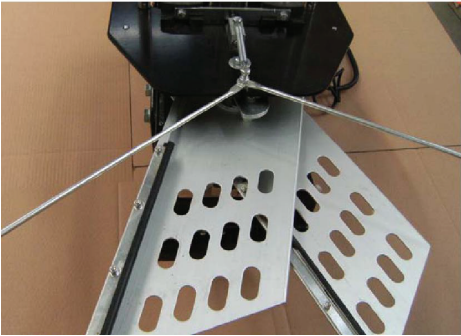

Low Voltage Light:

The LED Low Voltage indication light on the switch panel will light up when the battery voltage drops too low. This will indicate that your battery needs to be charged.



Switch Operation:

Off Position stops arm in current position/ On will cycle arm counter clockwise stopping at loaded 6 o'clock position/ Disarm will take arm clockwise all

the way out to the 12 o'clock unloaded position leaving no tension on the spring. When adjusting, reloading, or transporting or storing make sure the traps are disarmed, placed in the 12 o'clock unlocked position, and the main spring removed.



You must ensure that the trap is in an un-cocked position when not in use.

PLEASE ENSURE THAT ALL PARTIES INVOLVED WITH THE OPERATION OF THE WHITE WING AUTO TRAP READ

AND ADHERE TO ALL SAFETY WARNINGS.

EPIC SHOT OUTDOORS, LLC DOES NOT ACCEPT ANY RESPONSIBILITY FOR DAMAGES AND/OR INJURY SUSTAINED FROM THE USE OR MISUSE OF THIS PRODUCT.